

**W I D E R A N G E**  
*Western*  *Electric*  
**SOUND SYSTEM**

# 300B Vacuum Tube

*Western Electric*



## Classification

Moderate power, filamentary triodes for Class A service

## Application

Audio-frequency amplifier in positions where power outputs of approximately ten watts or less are required at relatively low plate voltages.

## Dimensions

Dimensions, outline diagrams of the tubes and bases, and the arrangement of electrode connections to the base terminals are shown in Figures 1 and 2.

## Base and Mounting

These vacuum tubes employ medium, four-pin thrust type bases suitable for use in Western Electric 143B or similar sockets. The 300B tube has the bayonet pin so located that it may also be mounted in a Western Electric 100M, 115B or similar socket.

The tubes may be mounted in either a vertical or horizontal position. If mounted in a horizontal position, the plane of the filament, which is indicated in Figure 2, should be vertical.

## Average Direct Interelectrode Capacitances

Grid to plate ..... 15  $\mu\mu$  f.  
Grid to filament ..... 9  $\mu\mu$  f.  
Plate to filament ..... 4.3  $\mu\mu$  f.

## Filament Rating

Filament voltage ... 5.0 volts, a.c. or d.c.  
Nominal filament current... 1.2 amperes

The filaments of these tubes are designed to operate on a voltage basis and should be operated at as near the rated voltage as possible. When alternating current is used for heating the filament, the grid and plate returns should be connected to a center tap on the secondary of the filament transformer.

## Characteristics

*Average characteristics -*

( $E_f = 5.0$  volts, a.c.,  $E_b = 300$  volts and  $E_c = -61$  volts).

Plate current ..... 60 milliamperes  
Amplification factor ..... 3.85  
Plate resistance ..... 700 ohms  
Grid to plate  
transconductance ..... 5500 micromhos

## Limiting Operating Conditions for Safe Operation

*Not simultaneous ratings*

Maximum plate voltage ..... 450 volts  
Maximum plate dissipation ..... 40 watts  
Maximum plate current of average tube for fixed grid bias ..... 70 milliamperes  
Maximum plate current for manually adjusted grid bias or self-biasing circuit. .... 100 milliamperes

## Recommended Operating Conditions

Recommended and maximum conditions for alternating-current filament supply are given in the table. Recommended conditions or others of no greater severity should be selected in preference to maximum conditions wherever possible. The life of the tube at maximum operating conditions will be shorter than at the recommended conditions.

Where it is necessary to operate the tube at or near the maximum plate current of 100 milliamperes, provision should be made for adjusting the grid bias of each tube independently, so that the maximum safe plate current will not be exceeded in any tube. Alternatively, a self-biasing circuit may be used, in which the grid bias for the tube is obtained from the voltage drop produced by the plate current of that tube flowing through a resistance.

Where it is necessary to use a fixed grid bias, the plate current of the average tube should be limited to a maximum value of 70 milliamperes, so that tubes having plate currents higher than the average will not exceed the maximum safe plate current.

# 300B Vacuum Tube

## Power Output and Distortion

Performance data including power output, second and third harmonic levels for a number of operating conditions are given in the table.

The variation of power output and harmonic levels with load resistance for several values of operating plate current are shown in Figures 7, 8 and 9, for a plate voltage of 350 volts.




The peak value of the sinusoidal input voltage,  $E_{gm}$ , which gives the indicated power output,  $P_m$  and harmonic levels,  $F_{2m}$  and  $F_{3m}$  for each point in both the curves and the table, is numerically equal to the grid biasing voltage at that point. For a smaller input voltage  $E_g$ , the approximate levels may be computed from the following relations.

$$P = P_m \left( \frac{E_g}{E_{gm}} \right)^2$$

$$F_2 = F_{2m} + 20 \log_{10} \frac{E_g}{E_{gm}}$$

$$F_3 = F_{3m} + 40 \log_{10} \frac{E_g}{E_{gm}}$$

Plate Voltage Volts	Grid Bias Volts	Plate Current Milliamps	Load Resistance Ohms	Power Output Watts	2nd Harmonic db	3rd Harmonic db
200	-42	30	2000	3.0	20	31
200	-39	40	2500	2.6	26	38
200	-37	50	2500	2.5	30	45
250	-55	30	2000	4.9	18	27
250	-55	30	4500	3.2	27	40
250	-52	40	3000	4.0	26	36
250	-50	50	2500	4.4	26	39
250	-48	60	2000	4.7	26	38
250	-48	60	2700	4.1	30	45
250	-45	80	1500	5.0	26	41
300	-65	40	2500	6.7	20	30
300	-63	50	2000	7.2	21	29
300	-63	50	3000	6.1	26	37
300	-61	60	2400	6.6	26	37
300	-61	60	3400	5.6	30	44
300	-58	80	1700	7.5	26	37
350	-76	50	3600	7.8	26	38
350	-76	50	5000	6.2	30	45
350	-74	60	2000	10.2	21	30
350	-74	60	3000	8.3	26	38
350	-74	60	4000	7.0	30	44
350	-71	80	2200	9.6	26	39
400	-91	40	5000	8.4	26	37
400	-89	50	3000	11.5	21	31
400	-89	50	4000	9.4	25	38
400	-87	60	3500	10.5	26	38
400	-87	60	5000	8.3	30	46
400	-84	80	2500	12.5	25	37
450	-104	40	6000	9.5	26	38
450	-102	50	5000	10.7	27	39
450	-102	50	6500	9.0	30	45
450	-100	60	4000	12.5	26	38
450	-100	60	5500	10.1	30	44
450	-97	80	2000	17.8	21	30
450	-97	80	3000	14.6	26	37
450	-97	80	4500	11.5	31	45

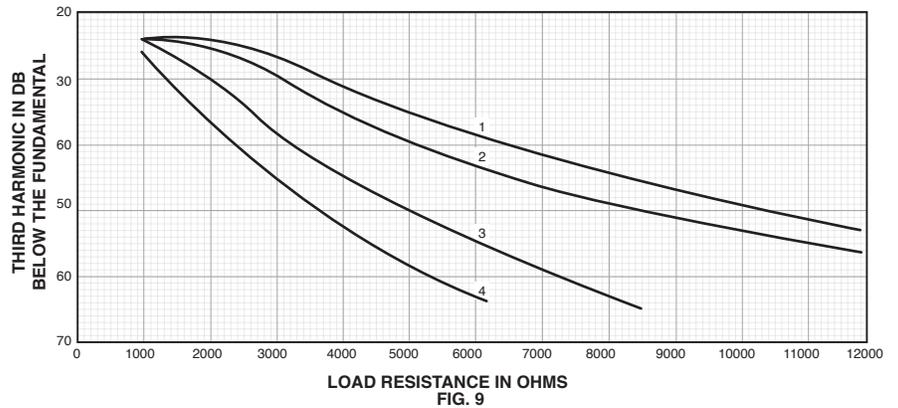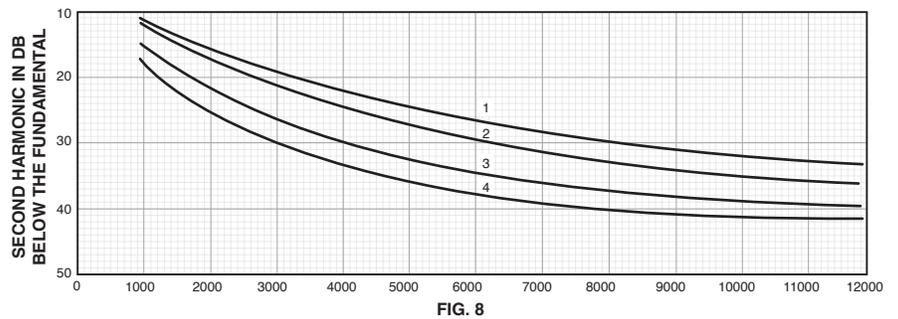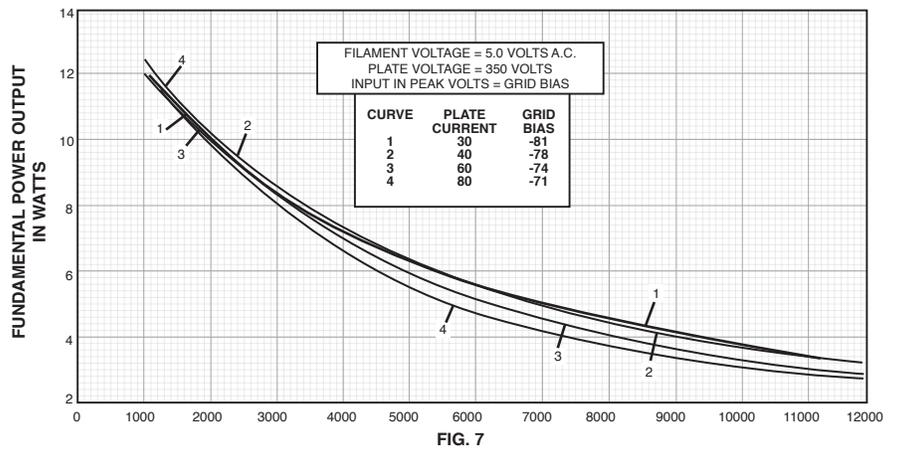

# 300B Vacuum Tube

## Characteristics

Plate-current characteristics for a typical tube are shown in Figure 3 as functions of grid bias, for alternating-current filament supply. The corresponding amplification-factor, plate-resistance, and transconductance characteristics are given in Figures 4, 5 and 6, respectively. When direct-current filament supply is used, and the grid and plate returns are connected to the negative end of the filament, the same characteristics are applicable if 3.5 is subtracted from the numerical value of each grid bias.

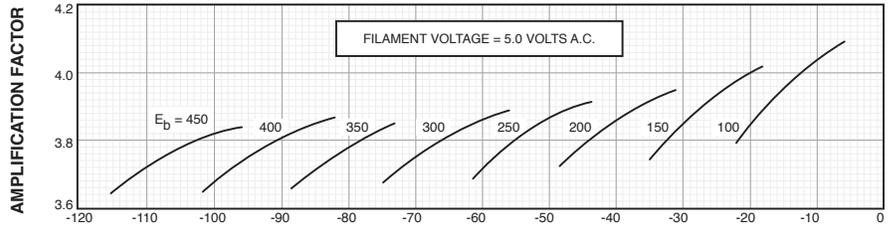


FIG. 4

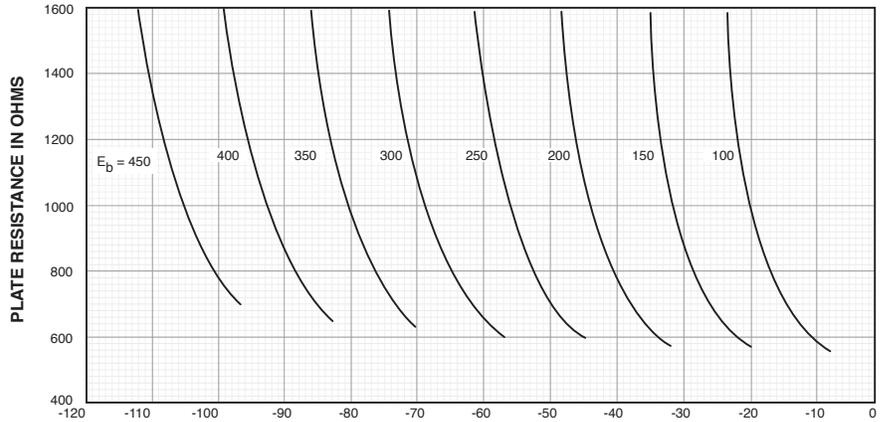


FIG. 5

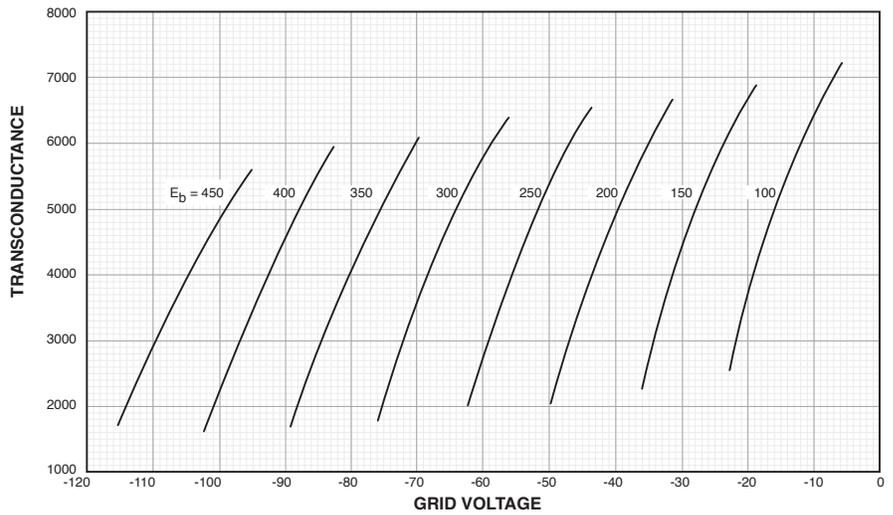


FIG. 6

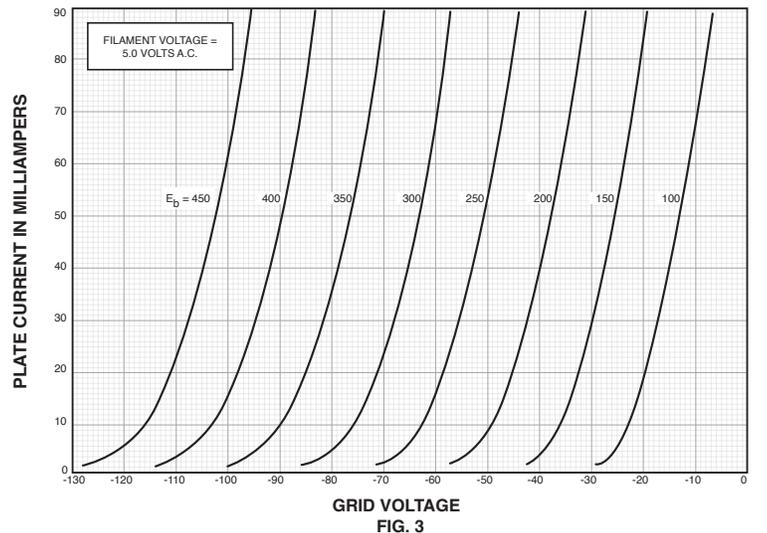


FIG. 3

# 300B Vacuum Tube

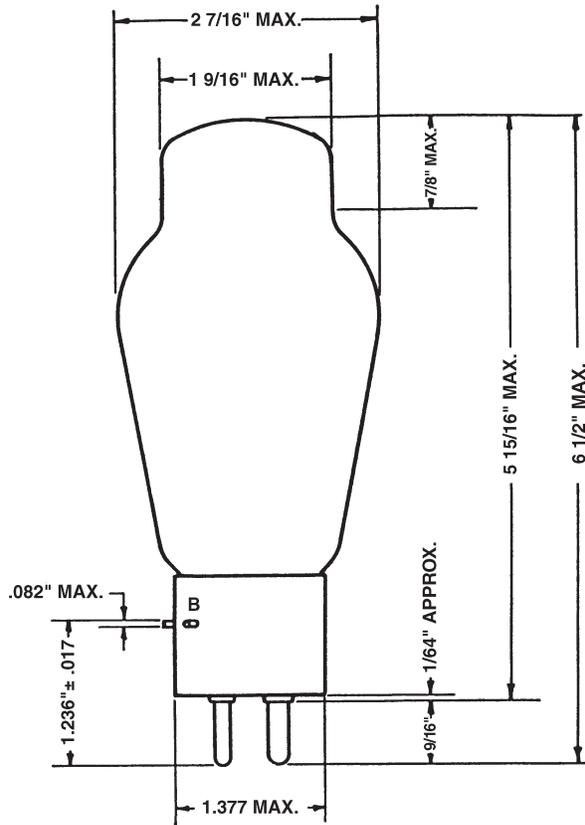


FIG. 1

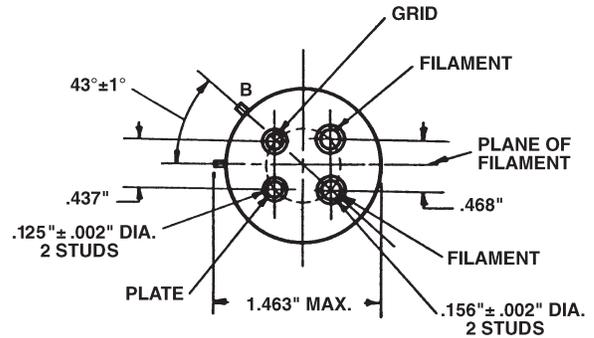


FIG. 2

B—LOCATION OF BAYONET PIN FOR 300B TUBE

## Ordering Information

(Order by Code and Comcode)

### Electron Tubes

Code	Application	Comcode
300B	Moderate Power Triode	100792522

For more information please contact Western Electric®

Western Electric®  
410 Chickamauga Avenue, Suite 300  
Rossville, GA

Phone: +1 404-352-2000  
[www.westernelectric.com](http://www.westernelectric.com)

Western Electric® High Fidelity products are marked worldwide Exclusively by Western Electric®

Western Electric® Electron tubes are manufactured in the U.S.A. Developments of Bell Telephone Laboratories Incorporated, research laboratories of Western Electric Company.

**Western Electric®**

Western Electric® reserves the right to make changes to the product(s) described in this document in the interest of improving internal design, operational function and/or reliability. Western Electric® does not assume any liability which may occur due to use or application of the product(s) or circuit layouts described herein.

Copyright © 2020 Western Electric Export Corporation. All Rights Reserved. Printed in the U.S.A.